

DW 9702 MULTI STAND

Remove the stand and all packing materials from the box, then follow these instructions to set up and adjust your stand to fit the way you play.

Section 1: Leg Assembly and Base Section Adjustments

Section 1.1: Leg Assembly

1. Loosen wingscrew at bottom of base section.
2. Fold legs outward far enough to allow the clamp to contact memory lock. Mega Base provides larger footprint for increased stability with double-cymbal setups.
3. Tighten wingscrew at top and bottom.

Section 2: Boom Arm Adjustments

Section 2.1: Straight/Boom Casting

DW's Straight/Boom Casting utilizes an exclusive double-sided clamp with one side used to adjust the distance and balance of the arm and the other controlling its angle. This casting is also designed to allow the stand to be converted from a boom to a straight stand by positioning the angle of the arm so that it is vertical and then telescoping it through the casting and into the top of the upper tube section. To adjust either one of the positioning adjustments, loosen the respective wingnut on the clamp, position the arm as desired and retighten the wingnut. New Quick-Release Ratchet opens easily to accept cymbal arms without moving cymbal arm memory locks.

Section 2.2: Boom Arm

1. Loosen the drumkey screw on the boom arm memory lock.
2. To adjust the distance of the arm, loosen the distance clamp wingnut and position the arm as desired.
3. Tighten the distance clamp wingnut.
4. Move the boom arm memory lock so that it interlocks with the notch in the top of the straight/boom casting and tighten the drumkey crew on the memory lock.

Section 3: Tilter and Cymbal Space Adjustments

Section 3.1: Tilter

1. Loosen the TechLock™ on the tilter section.
 2. Loosen the Position Reset Handle.
- Note: The Position Reset Handle is spring activated. To operate, grasp the handle with your fingers and use your thumb to press on the button in the center of the handle while pulling the handle away from the tilter. Reset the handle to a more comfortable position and release.
3. Adjust the angle of the tilter and retighten the Position Reset Handle and TechLock.
 4. SM2032 Auxiliary Tilter may be adjusted in the same manner.

Section 3.2: Cymbal Space Adjustment


1. Loosen the drumkey screw on the cymbal seat/cymbal space mechanism.
2. Spin the mechanism to open or close the amount of space between the upper and lower cymbal felts and the cymbal. Be careful to leave some slack in the spacing as this will allow the cymbal to sound fuller and prevent cracking.
3. Adjust the angle of the tilter and retighten the Position Reset Handle and TechLock.

Section 4: Memory Labels

Section 4.1: Memory Labels

Eight sets of Memory Labels are included with each 9702 stand. These labels can be adhered to the upper portion of each stand section and used to identify the parts of individual stands when multiple stands are separated for transport.

Accessories

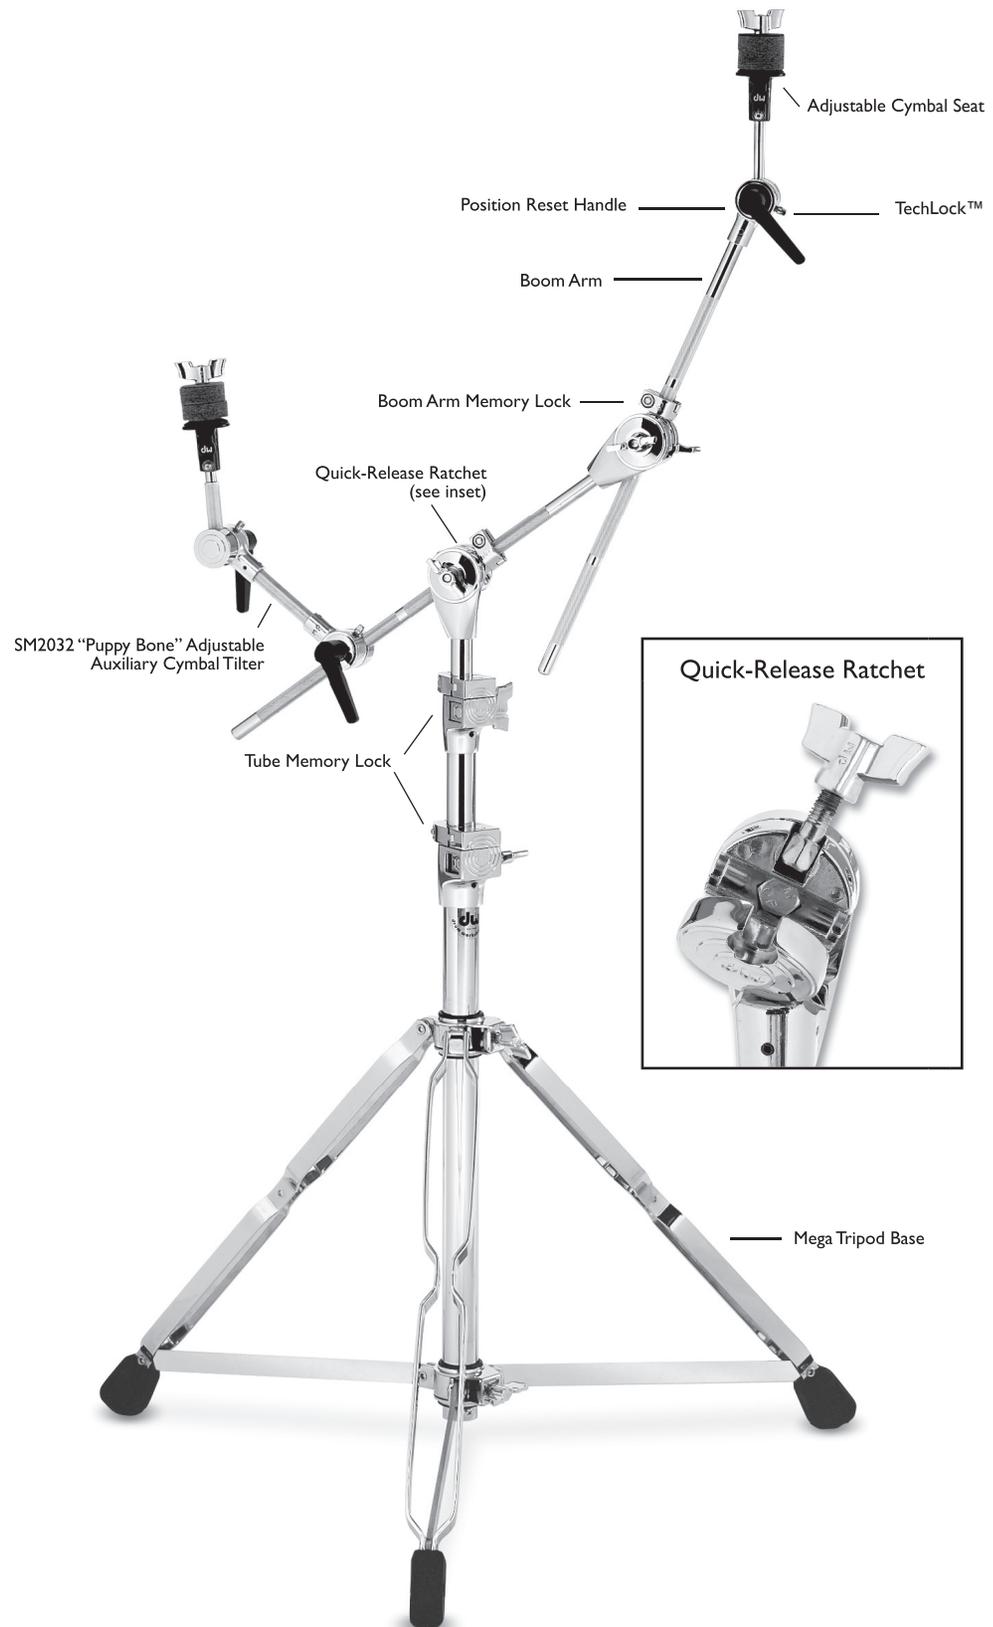

9702

Don Lombardi
 President, Drum Workshop, Inc.

DW 9702 Multi Stand

Thanks for purchasing this DW product. It has been designed and manufactured to provide a lifetime of trouble-free service. Please take a moment to familiarize yourself with the exclusive features and operating suggestions contained in this manual in order to ensure its optimum performance. Should you have any further questions, feel free to contact your local authorized DW dealer.

9000 SERIES MULTI STAND

OWNER'S MANUAL

DW HARDWARE 5-YEAR LIMITED WARRANTY

For a period of five years from the date of purchase, Drum Workshop, Inc. guarantees the original owner, when presented with proof of purchase, that all 9000, 5000 and 6000 Series Hardware cast parts are free of material and manufacturing defects. This warranty is limited to cast parts only. This warranty does not include moving parts. If, under normal playing conditions, parts covered in this limited five year warranty fail, they will be replaced at no charge. Return the item to your authorized DW dealer or, if there is not a dealer in your area, contact DW directly. DO NOT send products to DW without first receiving a Return Authorization Number. Shipping charges to DW will be paid by the consumer. DW's maximum liability pursuant to this warranty is limited to the monetary value of the product that is the subject of the warranty claim. This is a summary only; please see the actual limited warranty for additional terms and conditions.




The Drummer's Choice®

DRUM WORKSHOP, INC
 3450 Lunar Court • Oxnard, CA 93030 USA
 www.dwdrums.com

specifications subject to change without notice
 PR-OM-9702 © DW 2005



9300 snare drum	9934 double tom/cymbal	9900 double tom	9710 straight cymbal	9700 straight/boom cymbal	9500 hi-hat	9100 round throne	9120 motorcycle throne
-----------------------	------------------------------	-----------------------	----------------------------	---------------------------------	----------------	-------------------------	------------------------------

A wide range of DW 9000 Series Stands, Pedals, Thrones and Accessory Clamps and Arms are now available.

Contact your authorized DW dealer for additional accessories and replacement parts.